

▼ Mazda 6

▼ Mazda 6

- Ⓓ Wechselintervall alle ...
- ⒼⒷ Replacement interval ...
- Ⓘ Sostituzione dopo ...
- Ⓕ Intervalle de remplacement ...
- Ⓔ Intervalle de cambio ...
- ⒸⓁ Vervanging elke ...

15.000 KM /

10.000 MI

- Ⓓ ... oder nach 1 Jahr
- ⒼⒷ ... or after 1 year
- Ⓘ ... or dopo 1 anno
- Ⓕ ... ou 1 fois par an
- Ⓔ ... o después de 1 ano
- ⒸⓁ ... of 1 keer per jaar

micronAir®

Mazda 6

02 →

21652992 / CC1146 / MC 647
21653145 / CP1146 / MP 147

Einbauanleitung

Innenraumfilter

Fitting instructions

Cabin air filter

Istruzioni di montaggio

Filtro abitacolo

Notice de montage

Filtre d'habitacle

Instrucciones de montaje

Filtro de habitáculo

Inbouwhandleiding

Interieurfilter

www.micronair.com

© by Freudenberg Vliesstoffe KG 12/2002

