



460 872-03/8/00

Montageanleitung · Mounting instructions Instructions de Montage Monteringsanvisning Montagehandleiding · Instrucciones de montaje Istruzioni di montaggio · Asennusohje

BMW E39 (5er) → 08/00

- | | | | | | | | |
|---|---|--|--|---|---|--|--|
| (D)
A Blinklicht
B Leuchtweiten-
regulierung
C Standlicht
D Fernlicht
E Abblendlicht | (GB)
A Turn signals
B Headlamp
leveller
C Parking lamp
D Main beam
E Dipped beam | (F)
A feu clignotant
B correction de
la portée
lumineuse
C feu de position
D feu de route
E feu code | (S)
A Blinkljus
B Lysvidds-
reglering
C Parkeringsljus
D HELLJUS
E Halvljus | (NL)
A Knipperlicht
B Lichthoogte-
regeling
C Stadslicht
D Grootlicht
E Dimlicht | (E)
A Luz intermi-
tente
B Regulación del
alcance luminoso
C Luz de
población
D Luz de
carretera
E Luz de cruce | (I)
A Lampeggiatore
direzionale
B Regolatore
d'assetto fari
C Luce di
posizione
D Luce di
profondità
E Luce
anabbagliante | (FIN)
A Vilkkuvalo
B Valojen
korkeudensäätö
C Seisontavalo
D Kaukovalo
E Lähivalo |
|---|---|--|--|---|---|--|--|



