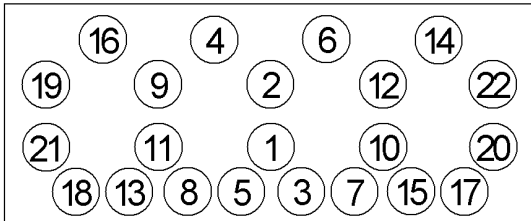


Anziehvorschrift für Zylinderkopf		143.280 passend für / suitable for adaptable à / adaptable a Fiat	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 760.300 M 12 x 120/160				
Anziehen/ Tightening/ Serrage/ Apriete		> 1984 * 39 Nm 88 Nm 1.000 km 88 Nm 1984 > * 20 - 40 Nm □ 40 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 1,74/1,65 mm, Ø 95,3 mm				
Mot.: 8144.61, S8U 720/722/730/731				
Fiat 131, Argenta, Ducato Iveco Daily Renault Master				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*143.280*	