

Anziehvorschrift für Zylinderkopf		526.895 passend für / suitable for adaptable à / adaptable a Honda	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑧⑥②⑤⑩ ⑦③①④⑨				
Anziehen/ Tightening/ Serrage/ Apriete		* 30 Nm 60 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
75 mm Ø				
Civic AL 1,2 Ltr. 40 kW (55 PS) 1984>1987 Mot.ZA2 ab Mot.1200 000>				
Civic AG 1,3 Ltr. 52 kW (71 PS), 1984>1987 Mot.EV2 ab Mot.1200 001>				
Civic AL, 1,5 Ltr. 63 kW (85 PS) 1984>1988 AG, AH, Mot.EW2 ab Mot.1200 001>				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*526.895*	