



## Filter, Innenraumluft

### Hinweis:

Der Innenraumluftfilter befindet sich im Motorraum des Fahrzeugs auf der Beifahrerseite hinter dem Luftfilterkasten.

### Ausbau:

Die Motorhaube öffnen und den Luftansaugschlauch durch Lösen der Befestigungsschraube entfernen.

(Abb. 1)

Die Abdeckung des Innenraumluftfilterkastens durch Lösen der Arretierungen entfernen.

(Abb. 2)

Den Filter entnehmen.

(Abb. 3)

### Einbau:

Der Einbau erfolgt in umgekehrter Reihenfolge des Ausbaus.

**Auf richtigen Sitz des Filterelements achten!**

**Bitte umweltfreundliche Entsorgung des Altteils gewährleisten!**

Dieser Einbauhinweis ersetzt nicht die Angaben des Fahrzeugherstellers. Die originalen Hinweise sind daher dringend zu beachten!

Abbildung ähnlich!

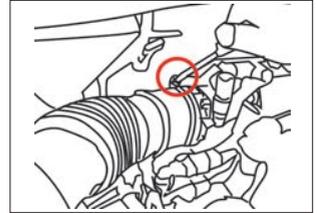


Abb. 1

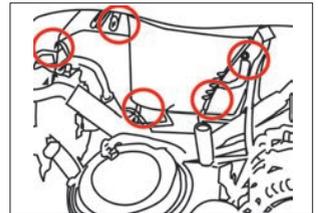


Abb. 2

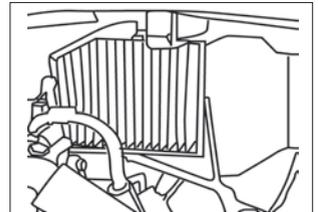


Abb. 3





## Filter, Cabin Air

### Note:

The cabin air filter is installed in the engine compartment at the co-driver's side behind the air filter housing.

### Filter Replacement:

Open the bonnet and detach the air intake hose by unscrewing the fitting bolt.

(pict. 1)

Remove the cover of the cabin air filter case by unscrewing the locking system.

(pict. 2)

Take out the filter.

(pict. 3)


The installation is done in reverse sequence of replacement.

**Take care about correct fitting of the filter!**


**Please think about the environment when you throwing away the old filter!**

This fitting instructions are declared without commitment and should be used as a substitute for the manufacturer instructions.


Similar to original!

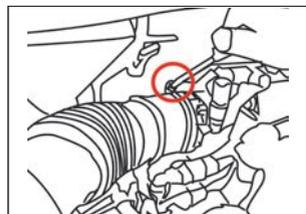

pict. 1

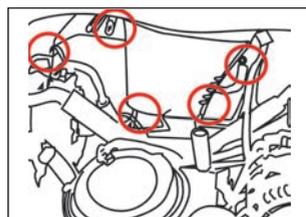

pict. 2

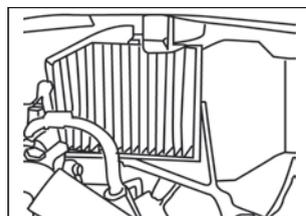

pict. 3

