

VKBA 3532

Technical Bulletin – December 2015



FORD: Focus, Fiesta V. Car model codes: DAW/DBW/DFW/DNW MAZDA 2




Caution, when fitting the wheel bearing kit VKBA 3532, it's mandatory to use the new nut included in the kit. Never reuse an old nut!



SKF has decided to change the nut in VKBA 3532, due to updated FORD OE recommendations.

Note: The included nut at kit VKBA 3532 has a new design and needs a different torque compared to the old design. It is crucial to follow the instructions when torquing the new nut since this is a safety aspect. See torque values stated at the warning label below.

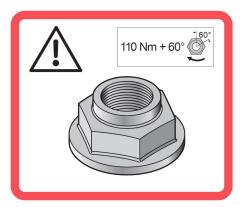





New design



Old design

Install confidence www.vsm.skf.com

