



VKBD 0162

Technical Bulletin – December 2015

VKBD 0162



FORD: Focus 1.4-16V / 1.6-16V
Car model codes: DAW/DBW/DFW/DNW




Caution, when fitting the wheel bearing kit VKBD 0162, it's mandatory to use the new nut included in the kit. Never reuse an old nut!



SKF has decided to change the nut in VKBD 0162, due to updated FORD OE recommendations.

Note: The included nut at kit VKBD 0162 has a new design and needs a different torque compared to the old design. It is crucial to follow the instructions when torquing the new nut since this is a **safety aspect**. See torque values stated at the warning label below.

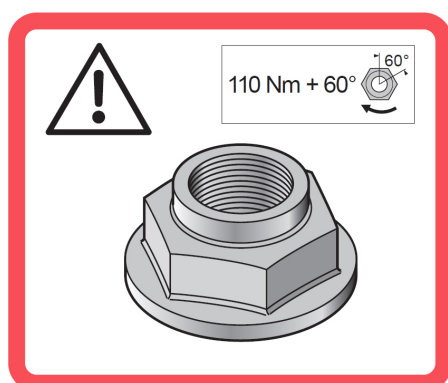

MI-542627



New design



Old design

Install confidence
www.vsm.skf.com

© SKF is a registered trademark of the SKF Group.

© SKF Group 2015

The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein.

