



## KB950.00

### Removal / Installation recommendations

**BMW:** M3 (E30, E36), Series 3 (E30, E36, E46), Z1 (E30), Z3 (E36)

**OE reference**  
33521128819  
33521137972

### IDENTIFICATION OF SUSPENSION BEARING KIT KB950.00



## COMMON PROBLEMS

### THE RUBBER ISOLATOR BUSH SEPERATING FROM THE METAL SUPPORT

#### Probable cause

**Incorrect assembly of the kits components.**

This failure is common when the shock absorber strut sub assembly is not correctly assembled ie, parts fitted the wrong way around or totally missed out.



#### RECOMMENDATIONS

- When replacing the insulator, make sure the two mounting cups (upper and lower) are retained as they are needed to reassemble the strut top mounting.
- Make sure the cups and reinstalled the correct way around.

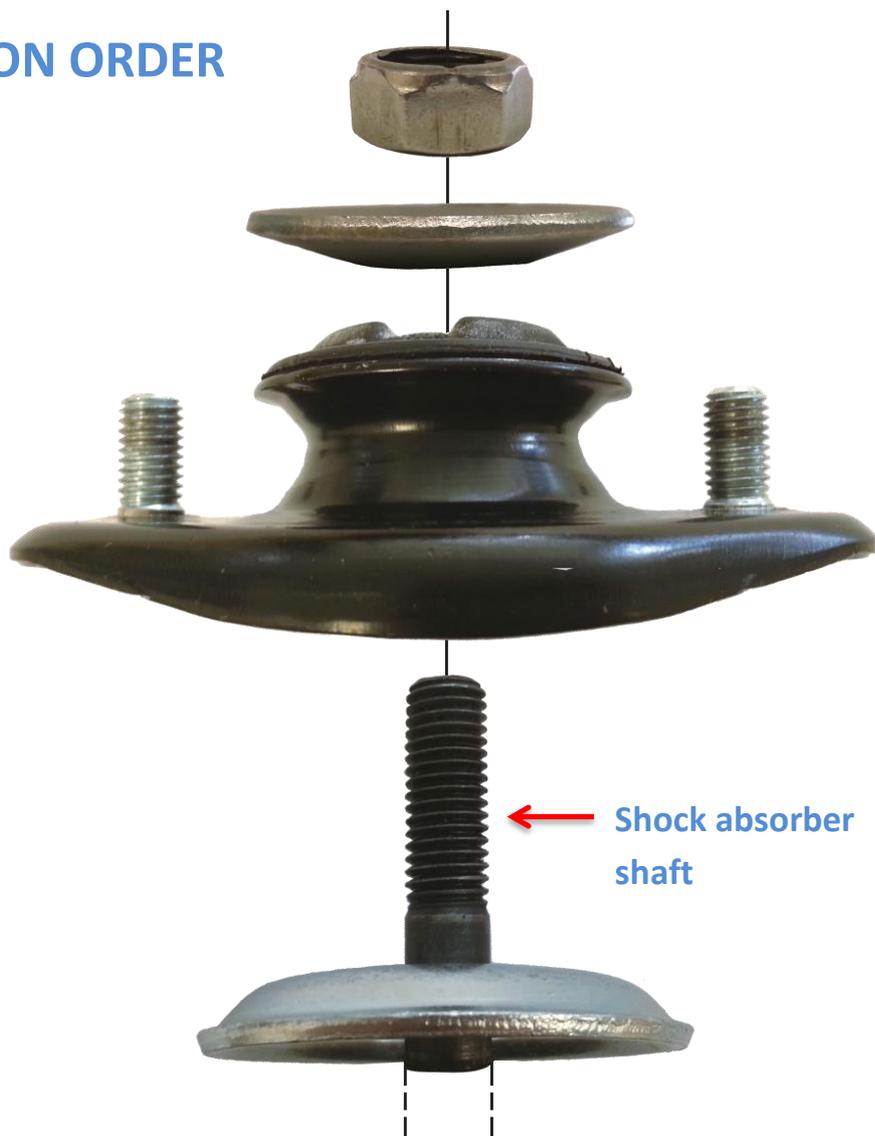
## KIT INSTALLATION INSTRUCTIONS



**Do not change the installation orientation of the upper mounting cup (dished upwards)**

**Do not forget to re-install the lower mounting cup in its correct installation orientation (dished downwards)**

## INSTALLATION ORDER

Recommendations

Follow the manufacturers' installation procedures and apply the tightening torques specified by the manufacturer.

Refer to the vehicle applications in our online catalogue: [eshop.ntn-snr.com](http://eshop.ntn-snr.com)



Scan this QR code to access our online catalogue.

**FOLLOW THE RECOMMENDATIONS  
OF THE VEHICLE MANUFACTURER!**

©NTN-SNR ROULEMENTS

The contents of this document are the copyright of the publisher and any reproduction, even partial, is prohibited without permission. Despite the care taken in preparing this document, NTN-SNR Roulements disclaims any liability for errors or omissions that may slip through, as well as for losses or direct or indirect damage arising from its use.

**NTN**® **SNR**®