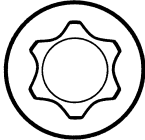


Anziehvorschrift für Zylinderkopf		075.830 passend für / suitable for adaptable à / adaptable a Citroën, Peugeot	 Das Original		
Tightening Instructions for Cylinder Head					
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete					
 267.550 M12x1,5x126					
Anziehen/ Tightening/ Serrage/ Apriete * 20 Nm * 60 Nm ➤ 220°					
Zeichenerklärung / Explanations / Explication / Explicacion					
* ➤	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor ✚ 1,35 mm, Ø 86 mm, 2 Kerben/notches/encoches/mue Mot.: DW10 TD/UTD/ATED/BTED, RHS, RHV, RHX, RHZ 2,0 ltr. HDi Diesel Berlingo, C5, Evasion, Jumper, Jumpy, Xantia, Xsa Scudo, Ulysse, Zeta, 206, 306, 307, 406, 407, 607 Expert, Partner, Grand Vitara					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*075.830*			