







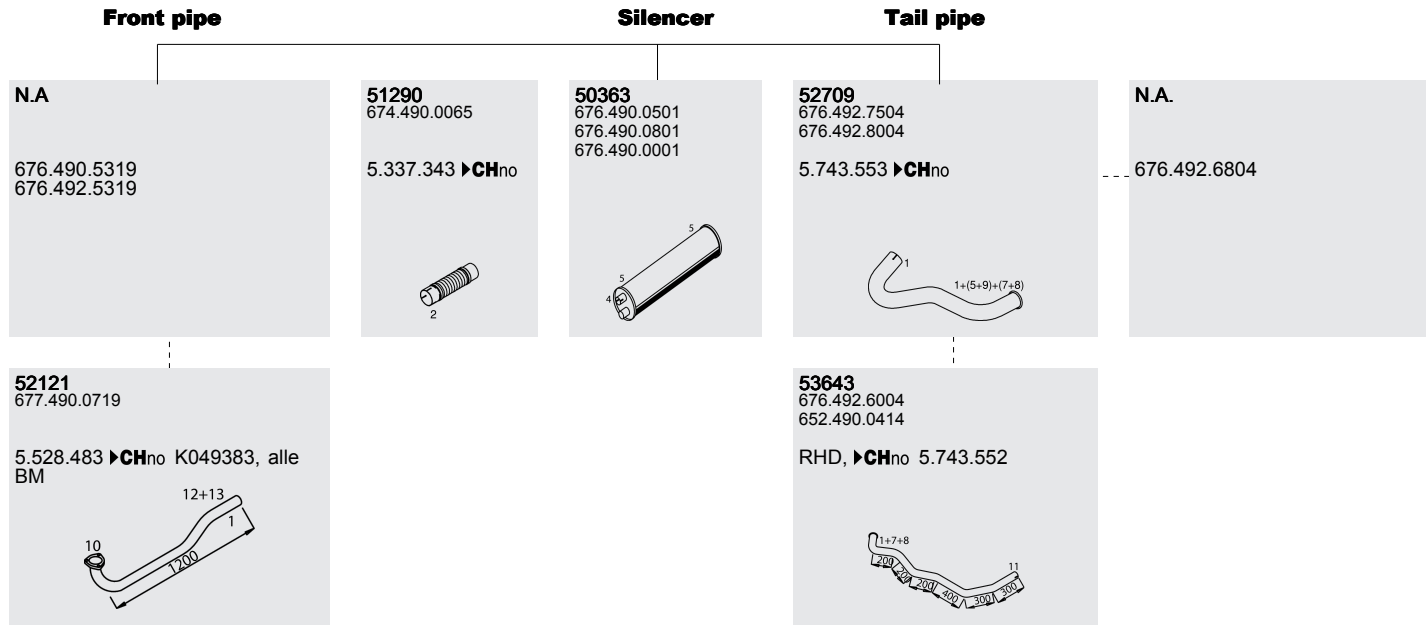















Manufacturers part numbers are quoted for reference only

Type	Baumuster
	676.222
1117	676.223
	676.224
	676.225
	676.232
	676.233
1317L	676.234
1517L	676.235
	676.256
	676.257
	678.022
1317LS.	678.023



**Mounting Parts**

<p>1.</p> <p><b>99789</b></p> <p>071.555.090.501</p> <p>395.492.0040</p> <p>645.492.1140</p> 	<p>2.</p> <p><b>50924</b></p> <p>674.492.0040</p> 	<p>3. ▶CHno 5.337.342</p> <p><b>50857</b></p> <p>674.491.0541</p> 	<p>3. 5.337.343 ▶CHno</p> <p><b>50860</b></p> <p>674.491.4541</p> <p>674.491.2641</p> 	<p>5. ▶CHno 5.337.342</p> <p><b>50947</b></p> <p>674.491.5741</p> 	<p>5. 5.194.473 ▶CHno 5.337.342</p> <p><b>50809</b></p> <p>381.492.0082</p> <p>301.492.0382</p> <p>0201.175.00</p> 	
<p>7.</p> <p><b>50904</b></p> <p>309.490.0037</p> 	<p>8. ▶CHno 5.337.342</p> <p><b>50925</b></p> <p>673.492.1041</p> <p>309.492.1441</p> 	<p>9. 5.337.343 ▶CHno</p> <p><b>50910</b></p> <p>384.987.7140</p> <p>001.987.9640</p> <p>001.987.5340</p> 	<p>10.</p> <p><b>50913</b></p> <p>0201.178.00</p> <p>350.492.0080</p> <p>0201.141.00</p> 	<p>11.</p> <p><b>50927</b></p> <p>676.492.0040</p> 	<p>12. Kit</p> <p><b>40090</b></p> 	<p>13. Cat.retrofit</p> <p><b>40315</b></p> 

Horizontal  
LHD/RHD  
Standard